

Stove Knob Covers

Now that baby is getting curious – keep your child from playing with stove knobs.

Read all instructions before installing. Keep these instructions for future use. Adult installation required.

To Use:

1. Remove the knobs from your stove control posts.
2. Open the cover of each stove knob cover by holding the base with one hand, pressing in on the black grip tab with your other thumb, and lifting up the cover.
3. Place one stove knob cover over each stove post and replace stove knob over post. Push down firmly on knob to be sure it's seated properly on post.
4. Close stove knob cover until you hear a "click" of the latch tab. Test by pulling up on cover to be sure it's snapped securely in place.

NOTE: To access stove knob, press black grip tab and lift cover.

CAUTION: This product is only a deterrent. It is not a substitute for proper adult supervision. Discontinue use when child becomes old enough to defeat it. Check for security after installation. Your child will eventually be able to defeat this product. To keep this product effective for as long as possible, avoid letting children see how you operate child safety devices. Watching you disengage a lock, latch or cover could enable them to learn sooner how to defeat it.

DO NOT use products if damaged or broken.

FOR INDOOR HOME USE ONLY.