


# Secure Self Adhesive Window Lock

## Installation Instructions:

\*Kindly read through before starting the installation process.

This is an Adult Only installation process.\*

1. Ensure your child is being supervised by an informed caregiver whilst you install.
2. Before sticking the product down, ensure you and your family are happy with the placement.
3. You can manipulate the length of the cable by placing the 2 components circled in the image below further apart on the frame of the window or the window itself. The further apart you place them the narrower the window can open when locked.

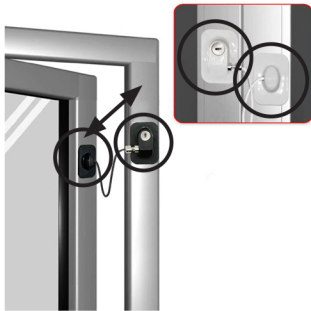

4. VERY IMPORTANT! **Use the adhesive primer/promoter** that comes with the window lock. Apply to the area BEFORE sticking the product down.
5. Remove film from self adhesive tape and stick it down. Push it down for a couple of seconds making sure all air bubbles are out
6. Don't touch the adhesive tape with your fingers as it will compromise the stickiness.
7. Once installed, deactivate and allow the double-sided tape to set for at least 12hrs before tugging and testing it.
8. After the setting period is over give it a good tug to test if the product is safe and secure,
9. Make sure you clean up afterwards, discarding of any packaging and placing the methylated spirits out of reach or in an already child proofed cabinet.
10. Give proper instructions on how to operate to everyone who will need to open and close the door/window.
11. Key must be kept safe and out of the reach of children.